



Disabling Display Centre

1. On MDM select “REMOTE EXECUTE”.

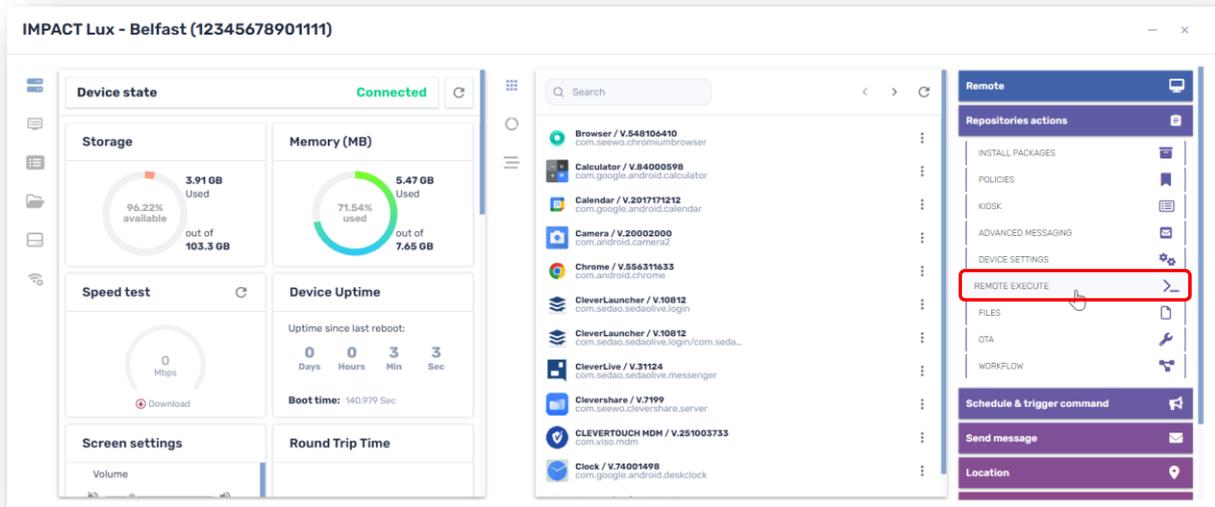

2. Select “ADD NEW”.

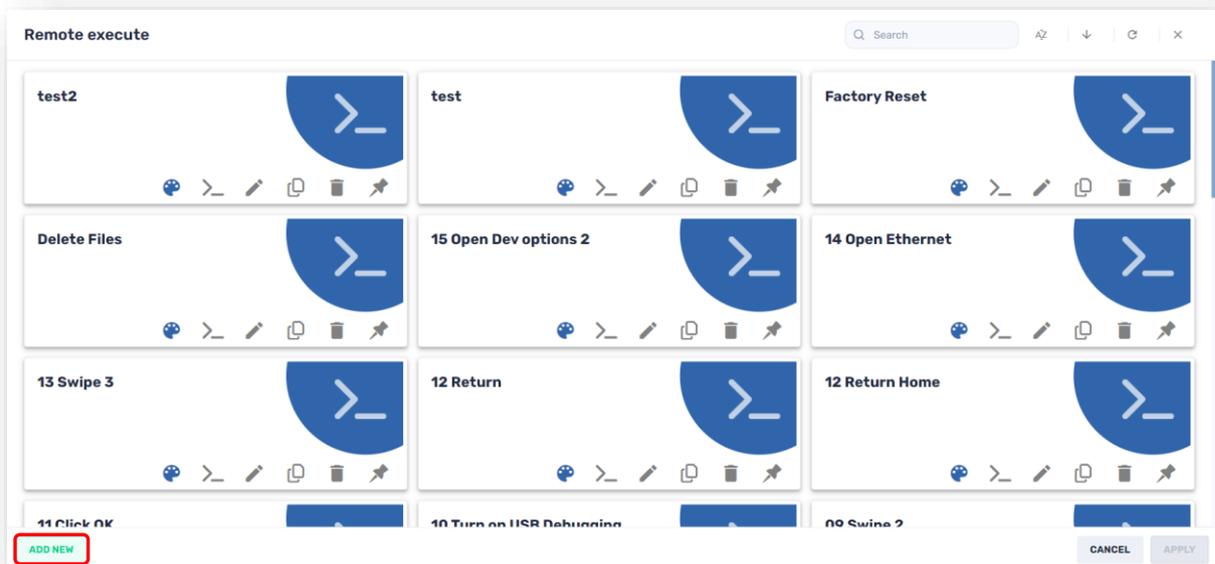

3. Add a name and enter the following command: `pm disable com.ifpdos.displaycenter`
Select “CONFIRM”.

New remote execution

Name
Disable Display Centre

Command
pm disable com.ifpdos.displaycenter

Arguments

Wait for exit

Collect output

Run with high privileges

Set as private
This repository item will be visible only to this user

Set as read-only
This repository item will be editable only to this user and admin users, and read-only for the others

CANCEL CONFIRM

4. Select the created command and select “APPLY”.

Remote execute

Disable Display Centre

test2

test

Factory Reset

Delete Files

15 Open Dev options 2

14 Open Ethernet

13 Swipe 3

12 Return

12 Return Home


11 Click OK

10 Turn on USB Debugging


ADD NEW

CANCEL APPLY

5. Once the command has been successfully executed, it will be shown in green.

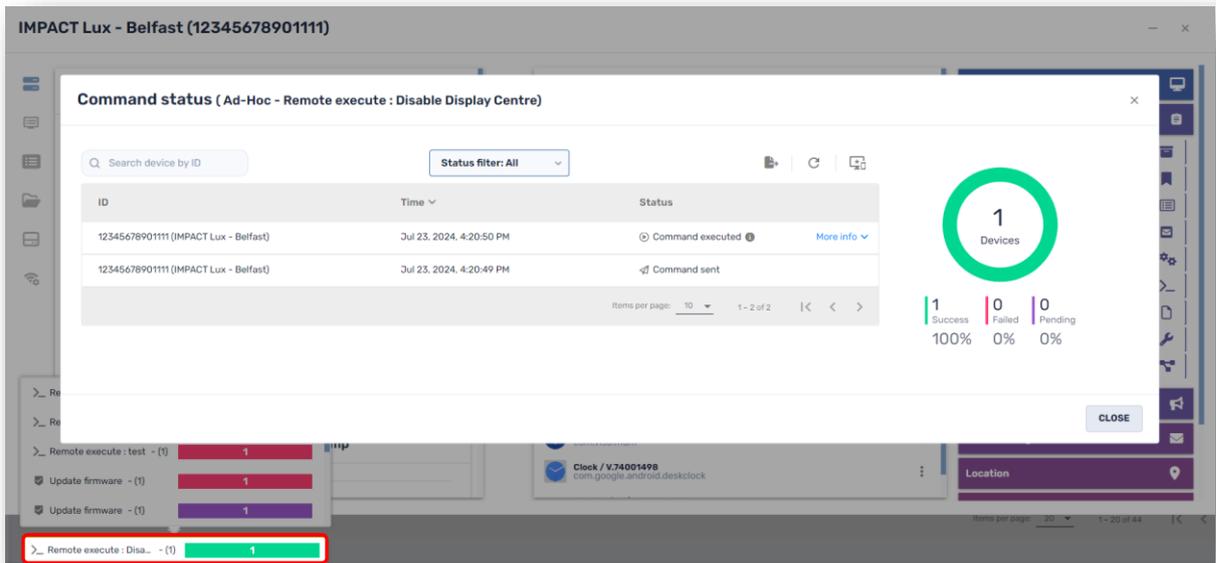

6. Restart your display and Display Centre will now be removed.

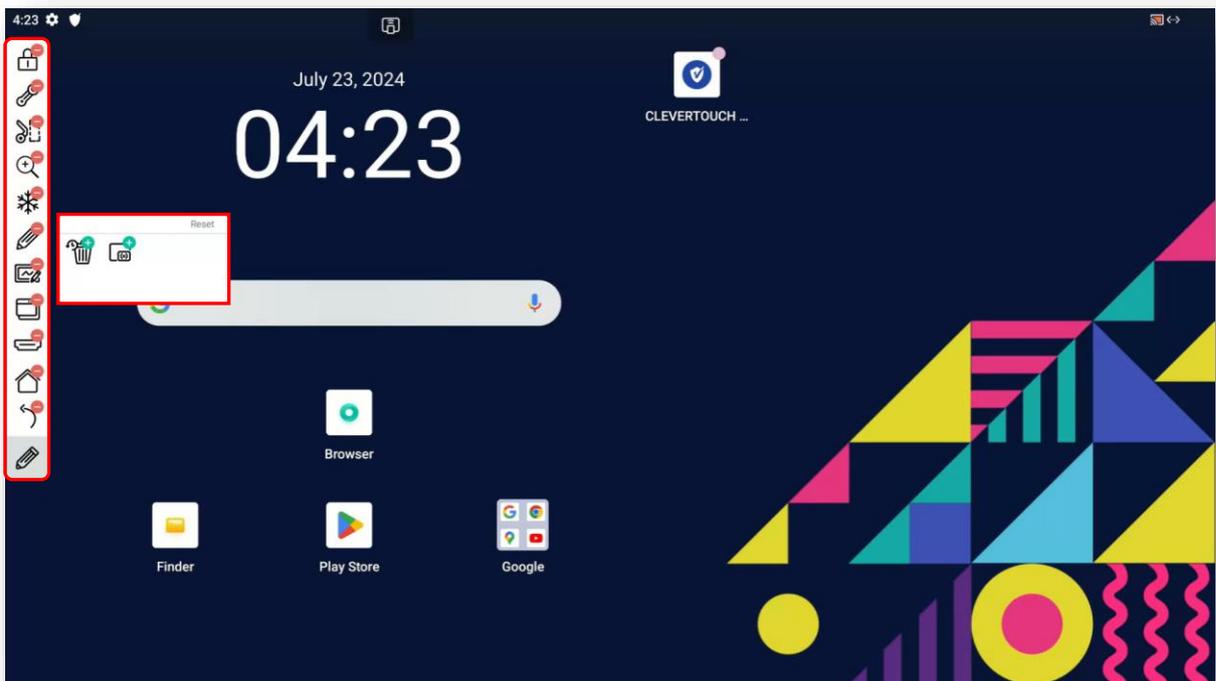

*** If at any point you would like to re-enable to Display Centre, repeat the above steps but instead, use the following command: `pm enable com.ifpdos.displaycenter` ***