# **CLEVERTOUCH**<sup>®</sup>

# by Boxlight®



# UX Pro Edge Set Up Guide

## Contents

2
3
8
12
23
26
28
30
32
36
38
40
42
44

## Turning On the Clevertouch UX Pro Edge Screen

Press the rocker switch which is located under the Edge to the right of pen holder, the Clevertouch screen will enter standby mode and he power button will illuminate at the bottom right-hand side of the screen.

Press the power button. The Clevertouch UX Pro Edge will power on and the red light will turn to a white light.



# First time setup

After the Clevertouch UX Pro Edge is powered on you will see the following screen.



Choose your preferred language.

	8	<sup>1</sup>
	Choose your language	
	Suggested	
	English (United States)	
	Español (Estados Unidos)	
	All languages	
	Català	
	Čeština	
	Dansk	
Hi there	Deutsch	
	English	Start
		Cancel

CLEVERTOUCH® by Boxlight®

Select Start.

	( G	-
		English (United Kingdom)
Hello		<ul> <li>Vision settings</li> </ul>
		Start

Select your Wi-Fi network (This will not show if Ethernet is connected).

ŝ		6
Connect to Wi-Fi Select a network	CleverHub	
	Clevertouch-Guest	
	Clevertouch-Secure	
	Clevertouch-Secure-Enterprise	
	Cvte22	
	✓ See all Wi-Fi networks	
	+ Add new network	
<del>~</del>	Set up offline	


Wait for Clevertouch UX Pro Edge to complete set up.




Sign in with your Google account (this is optional).

	لقار
	Google Sign in with your Google Account. Learn more
	Email or phone
	Forgot email? Create account
	Skip Next
<del>\</del>	


Select your preferred Backup and Storage settings and click Accept.

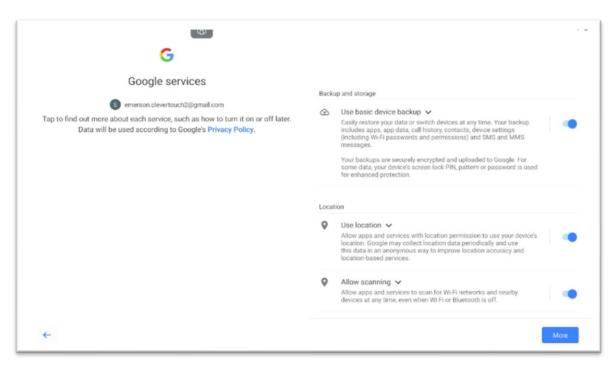

#### Set a PIN for security.

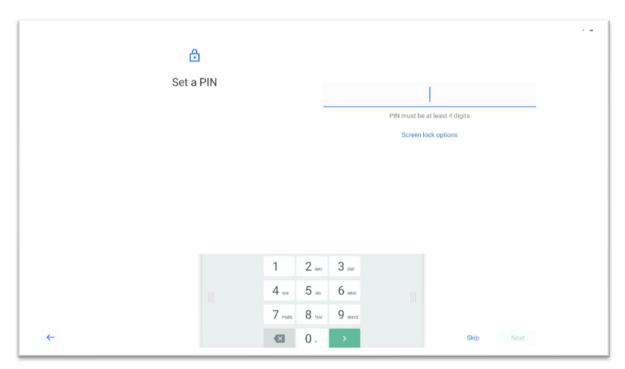


## Follow the on screen instructions to setup Google Assistant.

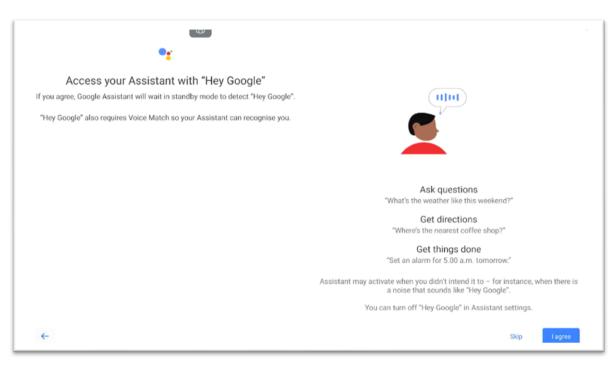

## Enrolling the screen to Clevertouch MDM

Open Clevertouch MDM app on your UX Pro Edge and enter your account name.

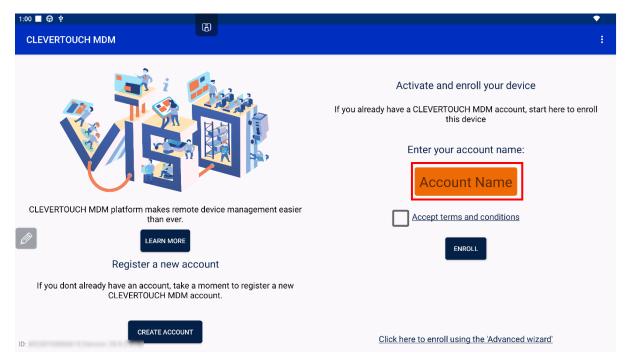

## Select "Enroll".

1:01 🔳 母 中	•
CLEVERTOUCH MDM	:
<image/>	Accept terms and conditions
ID:	Click here to enroll using the 'Advanced wizard'


1:01 🔲 🖨 🍯 🕸		•
CLEVERTOUCH MDM	( <del>3</del> )	÷
Device ID		
40.00 Total 10		
Domain		
saharapic		
Tags		
Belfast QA     enew	2	
25.9.2.974		

After enrolment, Clevertouch MDM will display your Device ID, Domain and Tags for the display.

## On your PC, navigate to <a href="https://www.clevertouch.glbth.com/">https://www.clevertouch.glbth.com/</a> and log in.

CLEVERTOUCH MDM login	
tom @ saharapic	
Password	
Forgot password?	
LOG IN	
OR	CLEVERTOUCH
*Google and Microsoft login required admin approval	
LOG IN WITH GOOGLE G	
LOG IN WITH MICROSOFT	
Don't have an account? Register	
CLEVERTOUCH	

After signing in, select the devices tab.

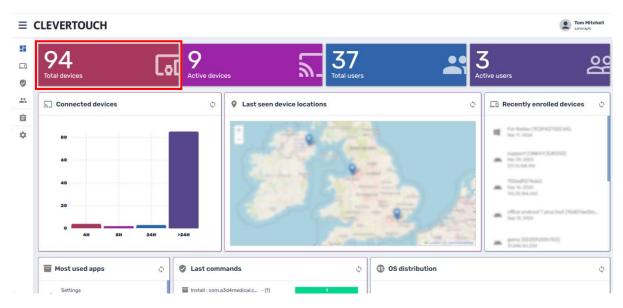

Your newly enrolled UX Pro Edge will be shown here.

= (	LEV	ERTOL	JCH	Remote	Install package Advanced message	Device settings	Policies Workflow	More actions		-	Tom Mitchell saharapic
	Dev	ices Grou	ıp: All		Q Search	Ŧ			♥ + œ	с ш	🖪 Groups
		os \Xi 🗘	Hardware ID 🗘	Name 0	Email 🗘	Last seen ~	Policy-Kiosk \Xi 🗘	Tags 💳	First Register 🗘	Groups	
9		-	beautivies?ct?add	🥒 Belfast Edge		() Mar 26, 2024, 1:20 PM	м	000		New devices	1
		-	100704/014	✓ 9999		() Mar 26, 2024, 12:50 .	70	(H0) (III)			E
9		-	NO-WOMAN .	1		() Mar 26, 2024, 11:42 A	à	(new)	Sep 16, 2022, 3:52 PM	New devices	:
2		-	4021052300215	/ UXPRO	personal distances	() Mar 26, 2024, 10:43 .	- 798	(new) (Belfast QA) (TM)		New devices	:
		-	activitanetti I	🖋 beta75plus	incut an april (operation)	() Mar 26, 2024, 7:38 Al	м	(beta) (bmm75test) (sa01)			:
		an.	any himited			(S) Mar 26, 2024, 7:31 AM	м				:
		26	AR222329000529	/		() Mar 25, 2024, 2:33 Pt	м	(1899)		(New devices)	:
		20	that have not be	CT-EVENT-04		() Mar 25, 2024, 2:04 Pl	M	(EDU) EVENT) (INFOCOMM)			:
		4	102742732044	🖋 For Nadav		() Mar 25, 2024, 9:42 AM	MS	(new)	Mar 11, 2024, 4:42 PM	New devices	1
		266	autoritanist?	🖋 robjack		() Mar 22, 2024, 8:42 Pl	M.	robjack			:
		-	1007042019	🖋 office android 7 plus test	niter familie (in an fault faithe	() Mar 13, 2024, 3:49 PM	м	(new)	Sep 13, 2022, 11:18 AM	New devices	:
		-		/ IMPACT Lux	a garren fille al na agrice e con	6 Mar 13, 2024, 9:47 AM	м	(NW)		New devices	E
	-		41101000000	# 111V - Rolfast	CHICKLE HOM CHICKNESS CONT	Mar 11 2024 9-34 AM	u	new Balfast 05		Nau desiras	

Select the pen icon to rename your UX Pro Edge.

≡ (	CLEV	ERTOL	JCH	Remote	Install package Advanced messag	e Device settings	Policies W	Hore actions		2	Tom Mitchell saharapic
5	Dev	ices Gro	up: All		Q Search	Ŧ			¥ + ©	с ш	Croups
		0s \Xi 🔇	) Hardware ID 🕽	Name 🗘	Email 🗘	Last seen ~	Policy-Klosk \Xi	≎ Tags <del>–</del>	First Register 🗘	Groups	
0			Investigation of the Party of t	🎤 Belfast Edge		(S) Mar 26, 2024, 1:20 Pf	м	(10.00		(New devices)	1
**		26	******	/ 9999		() Mar 26, 2024, 12:50 .	a ()	HQ (III)			:
Û		-	NO-WORKS	1		() Mar 26, 2024, 11:42 A	L	(new)	Sep 16, 2022, 3:52 PM	New devices	:
\$		-	4021052300015	/ UXPRO	persecutive destruction of the second	() Mar 26, 2024, 10:43 .	-	new Belfast QA (TH	0	New devices	:
		-	activitamental		incates and for general con-	() Mar 26, 2024, 7:38 Al	м	(beta) (bmm75text) (s	a01		1
		20	64%(0.1us201			(S) Mar 26, 2024, 7:31 AM	ч				1
		-	A8222329000529	1		() Mar 25, 2024, 2:33 P	м	(1000)		New devices	:
		20	Witt Passenala	CT-EVENT-04		() Mar 25, 2024, 2:04 P	м	EDU EVENT (INFOD	ОНМ		1
		4	102742732044	/ For Nadav		() Mar 25, 2024, 9:42 Al	м	new	Mar 11, 2024, 4:42 PM	New devices	:
		26	ac8275144475	robjack		() Mar 22, 2024, 8:42 P	M	robjack			:
		-	1007042018		rider for collection for the file	() Mar 13, 2024, 3:49 Pf	м	(1000)	Sep 13, 2022, 11:18 AM	New devices	1
		-		/ IMPACT Lux	a garantiga atas apir, con	🚫 Mar 13, 2024, 9:47 AM	и	new		New devices	:
		-	411107000000	& LUX - Rolfast		0 Mar 11 2024 9-36 AM		new Balfast 05		New Amires	

# Linking your UX Pro Edge to CleverLive

Once you are on the home screen, Open CleverLive.



Select Allow on both pop ups.

CeverLive CeverLive CoverLive to access music and audio on this device? Allow DovT ALLOW DovT ALLOW	1:43 🌣 🕑 💿 🔳 🔸		<b>&lt;</b> ··>
J         Allow CleverLive to access music and audio on this device?         ALLOW         DON'T ALLOW	CleverLive		
ALLOW			
ALLOW DON'T ALLOW			
ALLOW DON'T ALLOW		4	
DON'T ALLOW		Allow CleverLive to access music and audio on this device?	
DON'T ALLOW			
		ALLOW	
		DON'T ALLOW	


Select "OK".

1:43 CleverLive	B			¢.)
	Permission required This application needs access to the user data stor this source	re, Please turn on A	Allow from	
	Cancel	ок		
Ē				

Toggle the "Allow from this source" switch to on.

1:43 🕻	¢ Ø ∘ ■ ·	<··>
÷	Install unknown apps	
	CleverLive 3.11.9	
	Allow from this source	
	0	
	Your phone and personal data are more vulnerable to attack by unknown apps. By installing apps from this source, you agree that you are responsible for any damage to your phone or loss of data that may result from their use.	
Ø		

Select "OK".

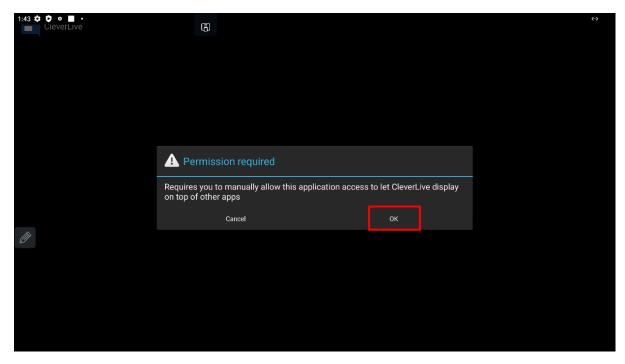

## Select CleverLive.

1:44 🕯	× 0	o 📕 •
÷	D	isplay over other app
ſ	8	CleverLive Not allowed
_ L		Not allowed
		Clevershare Allowed
	0	CLEVERTOUCH MDI Not allowed
	٥	Cloud Drive
	•	Finder Allowed
	G	Google Allowed
	2	Google Play service
	۰	Meet Not allowed

Toggle the "Allow display over other apps" switch to on.

1:44 🌣 🗘 o 🔳 •	<b>€</b> • <b>&gt;</b>
← Display over other apps	
CleverLive 3.11.9	
Allow display over other apps	
0	
Allow this app to display on top of other apps you're using. This app will be able to see where you tap or change what's displayed on the screen.	
$\partial \mathcal{P}$	

Select back then select the settings cog.



Go into Settings.

	CleverLive System Status	×
Settings	Player Name	
WIFI MAC: IP:	LAN MAC: IP: 192.168.200.238	

Select "Check for new software updates".

1:45 🌣 🗘 🛛	•	<b>&lt;</b> >
Setting	م ا	
	ABOUT	
	Current Version 3.11.9	
	Check for new software updates Click this button to check for a software update to CleverLive	
	CleverLauncher Click this button to install or upgrade CleverLauncher	
	GENERAL	
	Start with OS Automatically connect to CleverLive when OS boots	
Ø	Delay before starting with OS How may seconds to wait before the aplication is launched	
	Use as digital signage Use application for digital signage	
	Hide on touch Automatically hide the Messenger on touch	
	PIN Code Specify PIN code to access CleverLive settings	

Follow the on-screen instructions to update CleverLive.

1:45 🌣 👂 🛛 🗌	•					<b>&lt;</b> ·· <b>&gt;</b>
Settings		- -				
	ABOUT					
	Current Version 3.11.9					
	Check for new software u Click this button to check for a so					
	CleverLauncher Click this button to install ocupar					
	GENERAL 3.11.22 U	grade is available. Would you	u like to downlo	ad and install?	- 8	
	Start with OS Automatically con	No		Yes		
Ø	Delay before starting with How may seconds to wait before	OS the aplication is launched				
	Use as digital signage Use application for digital signag	•				
	Hide on touch Automatically hide the Messenge	on touch				
	PIN Code Specify PIN code to access Cleve	Live settings				

Once you have updated CleverLive, return to the settings and tap the CleverLauncher button.

¢ 🗘 o	■ • []		
Setting			
	ABOUT		
	Current Version		
	3.11.22		
	Check for new software updates		
	Click this button to check for a software update to CleverLive		
	CleverLauncher		
	Click this button to install or upgrade CleverLauncher		
	GENERAL		
	Start with OS		
	Automatically connect to CleverLive when OS boots		
	Delay before starting with OS		
	How may seconds to wait before the aplication is launched		
	Use as digital signage		
	Use application for digital signage		
	Hide on touch	<b>v</b>	
	Automatically hide the Messenger on touch		
	Show coordinates on touch		
	Displays its current screen coordinates in the format (X, Y)		
	DIN Codo		


Follow the on screen instructions to update CleverLauncher.

1:45 🌣 🖻 🔹		(J)			€->
	ABOUT				
	Current Version 3.11.22				
	Check for new softwar Click this button to check for	re updates a software update to CleverLive			
	CleverLauncher Click this button te installion GENERAL	upgrade is available. Would you I	ike to download and i	nstall?	
	Start with OS Automatically con	No	Ŷ	/es	
Ø	Delay before starting we How may seconds to wait be	vith OS fore the aplication is launched			
	Use as digital signage Use application for digital sig				
	Hide on touch Automatically hide the Mess	enger on touch			
	Show coordinates on 1 Displays its current screen c	ouch pordinates in the format (X, Y)			
	DIN Cada				

On your desktop/laptop go to <u>www.Cleverlive.com</u>, select "Sign up" and follow the instructions to create your account or enter your login details for an already existing account.

DASHBOARD						
DASHI					English	~
	CLEVERLIVE DIGITAL SIGNAGE	<b>* 0</b>		Sign in		
	DiGITAL SIGNAGE Search  ©		Sign in Logi Industed Covertue of Ogenal Coor Passard Industed Covertue of Ogenal Industed Covertue of Ogenal Industed Covertue of Ogenal	Not sure if you need CleverLive? Sign up for our 30 day free trial or click the find out more button below. <b>INIC OUT MORE</b> SIGN UP FOR A 30 DAY FREE TRIAL		
			Didn't receive confirmation instructions?			


On your Clevertouch device, open the CleverLive app and you will be prompted with a Pin code & a QR code. If you are signed into CleverLive on your mobile browser you can scan the QR code to add your screen to your account, otherwise, head over to the CleverLive website and follow the steps below.

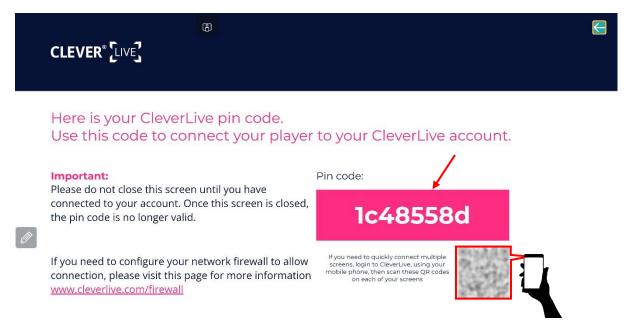


#### Return to <u>www.Cleverlive.com</u> and sign in.

DASHBOARD				
DASHI			English	~
	CLEVERLIVE DIGITAL SIGNAGE	Sign in		
	Search	<image/> <complex-block></complex-block>		


### Select Screens.

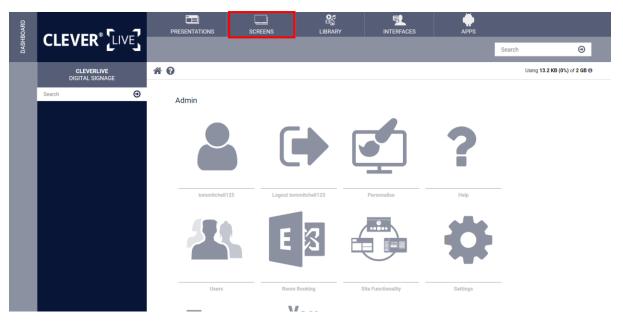


Select the "+" icon to add the screen.

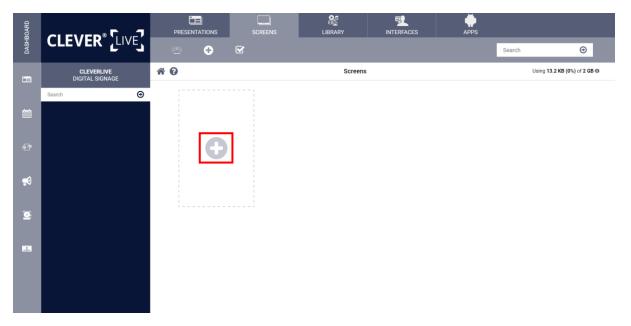

Enter the Pin that is showing on your Clevertouch device & click "Submit".

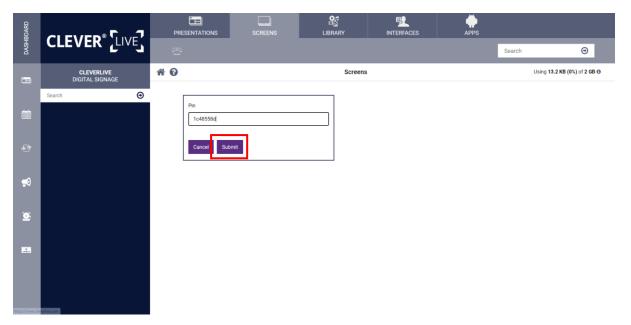

Your UX Pro Edge will now show in the "Screens" tab. Click the edit icon to rename.

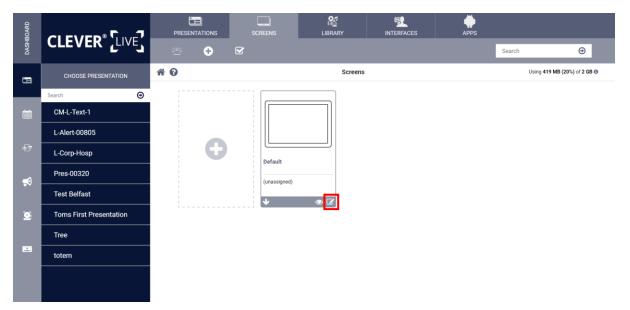

Rename your screen and select "Save".

DASHBOARD		PRESENTATIONS	SCREENS			پ APPS		
DASHE							Search	Θ
	<b>CLEVERLIVE</b> DIGITAL SIGNAGE	* 0		Editing Screen I	Default		Using <b>41</b>	9 MB (20%) of 2 GB 🕲
	Search O	Name Belfast Edge Presentation (Disabled) Cancel	70	Room Booking	Advanced			

# Disabling lock screen notifications


Swipe down from the top of the screen to open the native toolbar.

7 N	Mon, Feb 12						
							۲
	Internet > Clevertouch-Se	*	Bluetooth Off		⊖ <sup>Do</sup> <sub>Off</sub>	Not Disturb	
\$	Auto-rotate Off				★ Air Off	rplane mode f	2
•	5) Screen record > Start	×	Nearby Share	•			
13 (1	TD1A.220804.031)						0
G	) 3 apps are active					<b>9</b>	Ċ


Tap the cog to open settings.

37	Mon	n, Fet	12							
										۲
		Interr Cleve		:h-S∈	>	*	<b>Bluetooth</b> Off	e	Do Not Disturb	
r.	\$ <sup>#</sup>	<b>Auto-</b> Off	rota	e				+	Airplane mode Off	
9	<u>،</u> (	Scree Start	en re	cord	>	×	Nearby Share			
13 (	(TD1	1A.22	080	1.031						0
(	i) 3	3 арр	s ar	acti	ve				<b>(2)</b>	Ċ


### Scroll down and select Privacy.

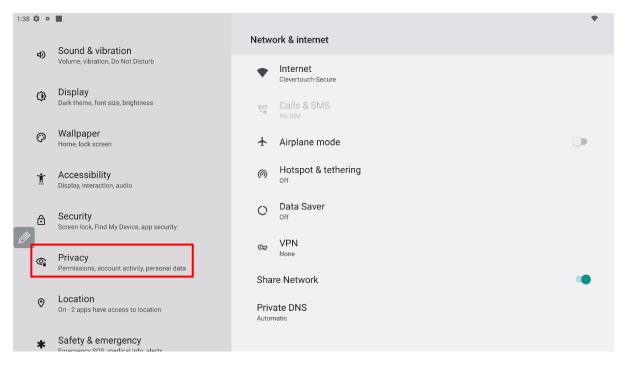

#### Select Notifications on lock screen.

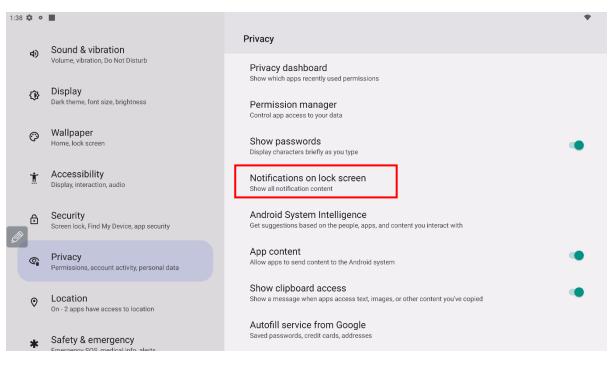


### Set it as "Don't show notifications at all".

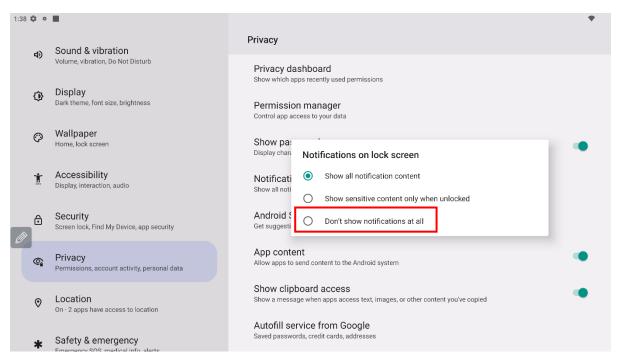



## Enabling Multi window mode

To access the settings app, on your home page, swipe up from the middle of the screen and select the Settings icon.

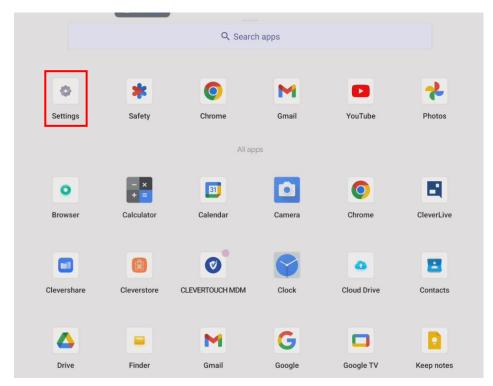

In the settings app, go to "Personal" and toggle the "Multi-Window Mode" switch to on.

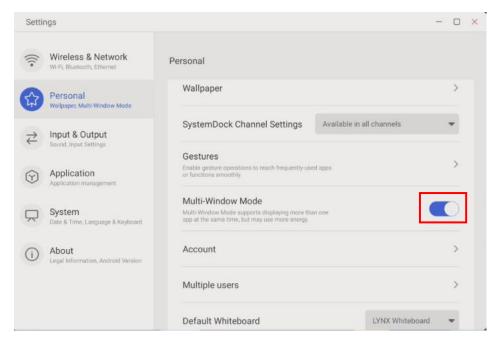


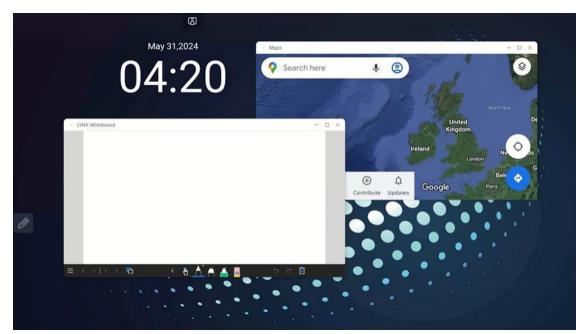

Your screen will reboot and you can now open all apps in windowed mode.

# **Disabling Show Passwords**

Swipe down from the top of the screen to open the native toolbar.

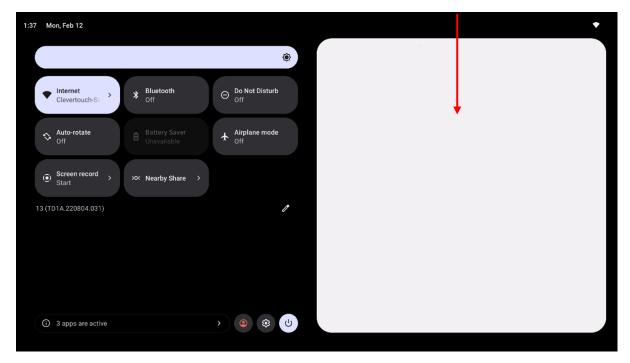


Tap the cog to open settings.

1:37	Mon	n, Feb	12							
										۲
•	♥ Ir C	I <b>nterne</b> Clevert	et ouch-S	}€ <b>&gt;</b>	*	<b>Bluetooth</b> Off	e	Do Not Di Off	isturb	
	\$ A c	<b>Auto-r</b> o Off	otate				Ŧ	Airplane Off	mode	
	(ق) ا	<b>Screen</b> Start	recor	a >	~~	Nearby Share				
13	(TD1.	IA.220	804.03	31)						0
C	<b>Э</b> з	3 apps	are ac	tive				٩	÷	Ċ



Select "Privacy" then disable the switch for "Show Passwords".

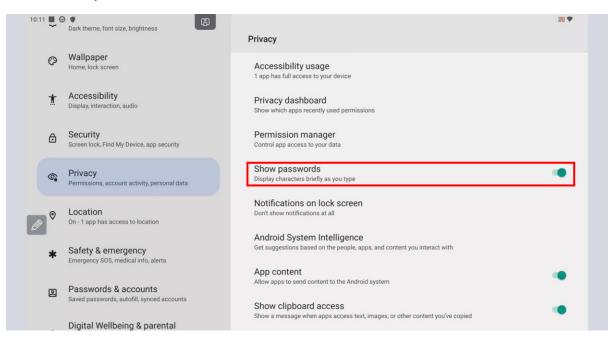

# Removing the native toolbar

In the settings app, go to "System".

1:23 🔲 🖨				•
	ā			
	Wireless & Network Wi-Fi, Bluetooth, Ethernet	Wireless & Network		
	Personal Weatpapes, Multi-Window Mode	Wi-Fi	On >	
	Hinput & Output Sound, Input Settings	Ethernet	Off >	
	Application Application management	Hotspot	Off >	
	System Date & Time, Language & Keyboard	Bluetooth	Off >	
	About     Legal Information, Android Version	Share Network		
Ø				

Toggle the "Always hide native status bar" switch to on.

1:23 🔳 🖨	ß		
	Wireless & Network Wi-R, Bluetooth, Ethernet	System	
	Personal Welfpoper, Multi-Window Mode	Date & Time	>
	→ Input & Output Sound, Input Settings	Language & Keyboard	>
	Application Application management	WiFi Region Network service based on your choice of country or region.	America 👻
	System Date & Time, Language & Keyboard	Settings Lock Password	>
	About     Legal Information, Android Version	PIR Settings	>
		Pixel Shift	nterval 60 mins 🛛 🔻
		Email	>
		DynaScrybe	>
		Always hide native status bar	
		Storage	> 
		System Update	>

The UX Pro Edge will prompt you to reboot, select Reboot.

1:23 🔲 🖨	F		•
	ā		
	Wireless & Network	System	
	Personal Westpaper Moth-Window Mode	Date & Time	
		Language & Keyboard	
	Application Application management	WiFi Region Network control hand on your cryster of country or region.	
	System Date & Time Language & Keytoard	Reboot	
	About     Legal information, Android Version		>
		Changing this option needs reboot to take effect, reboot now?	
		Cancel Reboot	
Ø		DynaScrybe	
		Always hide native status bar	0
		Storage	
		System Update	>

# Setting up multiple users

## In the settings app, go to "Personal".

Settings				- 0 ×
	<b>/ireless &amp; Network</b> FL Bluetooth, Ethernet	Input & Output		
	ersonal allpaper, Multi-Window Mode	Touch Sounds		
	aput & Output und, Input Settings	Sound Output Settings	Speaker	*
	pplication	Speaker	AUTO	•
	ystem ite & Time, Language & Keyboard	Mic	AUTO	•
		Input Settings		
	bout gal Information, Android Version	Input Naming Settings		>
		External Source Display Settings		

## Select Multiple users.

4:04 🌣 🔳 🖨 🛡	ā			<b></b>
	Wireless & Network     WHFL Bluetooth, Ethemet	Personal		
	Personal Wallpaper, Multi-Window Mode	Wallpaper	>	
		Hotkey Hotiky supports setting quick actions to the programmable button at the side of the display	None	
	Application Application management	Disable Hotkeys		
	System Date & Time, Language & Keyboard	SystemDock Channel Settings	Available in all channels	
	About     Legal Information, Android Version	Gestures Enable gesture operations to reach frequently used apps or functions smoothly.	>	
		Multi-Window Mode Multi-Window Mode supports displaying more than one app at the same time, but may use more energy.	<b>3</b>	
		Account	>	
Ø		Multiple users	>	
_		Default Whiteboard	LYNX Whiteboard 🗢	
		Default home app	Lux for Education	
		Block Saving		

## Select Add user.

÷	Multiple users					
	Allow multiple users					
	You (Owner) Admin	Add NFC Show NFC				
	Add guest					
	Add user					

## Select OK on the popup window.

Add new user?	
When you add a new user, that person needs to set up their space.	
Any user can update apps for all other users.	
	06


Enter username and select OK.

st	User info		~
r			
וו	Tom		
L		CANCEL	ОК

#### Select Switch to User.

1:15	<b>\$</b> 0							<··>
	<b>(</b> )	Privacy Permissions, account activity, personal data	← Tom					
	0	Location On - 2 apps have access to location	t €	Switch to Tom Delete user				
	*	Safety & emergency Emergency SOS, medical info, alerts						
	Q	Passwords & accounts Saved passwords, autofill, synced accounts						
	\$	Digital Wellbeing & parental controls Screen time, app timers, bedtime schedules						
	G	Google Services & preferences						
	<b>i</b>	System Languages, gestures, time, backup						
	1	About phone Impact_Lux_Display						

A popup window appears asking if you want to setup your space. Select Set up now.

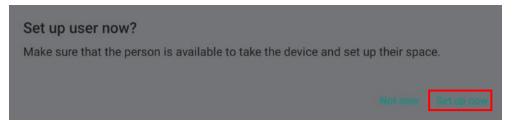

Set up new user You've been added to this tablet	Important:  • The tablet's owner can uninstall your apps or remove your user profile entirely • Any other user can accept updated app permissions • Only share this tablet with people that you trust  © Vision settings
÷	Cancel

Set up new user window appears, select continue.


Add the Google account information as previously discussed in this guide.

Set a Pin for the new user, as previously discussed in this guide.


Set up Google assistant as previously discussed in this guide.

## Adding NFC


Return to the Owner account and In Multiple users, select "Add NFC" for the new user.

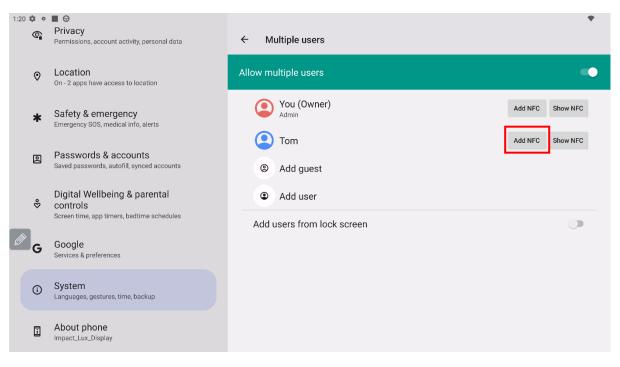

Present the card to the front NFC sensor and select "Add NFC".

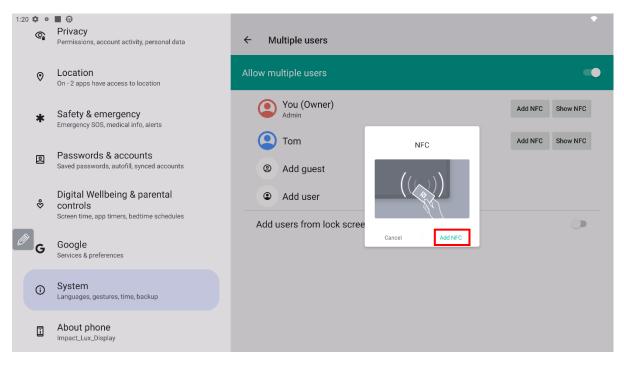

### Select Show NFC to confirm.

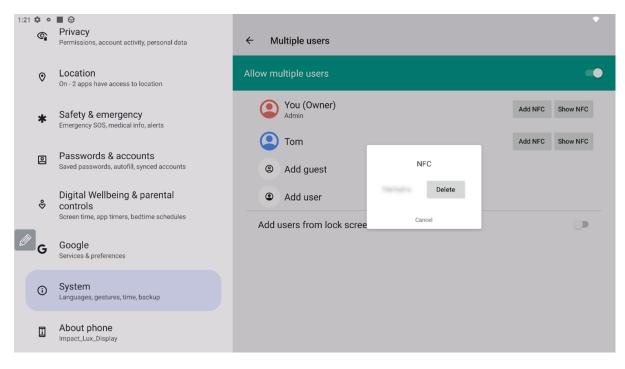

# Switching user


Open the floating pen tool and select the lock icon.



Select the user icon from the top right of the screen.



## Select the user you wish to switch to.

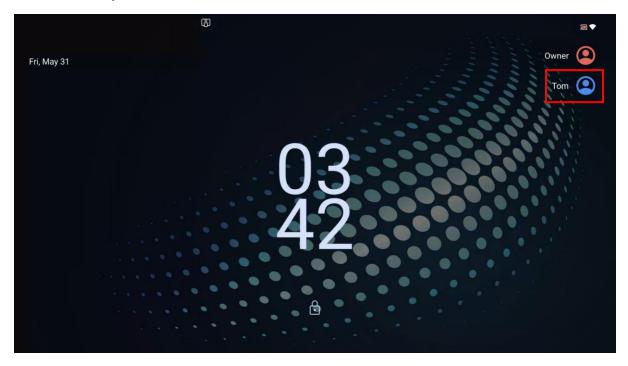

(You can also tap your NFC card to switch user if this has previously been set up)

# Over The Air Updates (OTA)

In the Settings app, go to "System" then select "System Update".

3:05 💼 🥝 🍯 🔹 🔸					🗐 💎
	ā				
((:-	Wireless & Network W-Fi, Bluetooth, Ethernet	System			
		Language & Neyboard		1	
<u>ل</u>	Personal Waltpaper, Multi-Window Mode				
		WiFi Region Notwork service based on your charge of country or region.	United States of America	*	
₹	Input & Output Sound, Input Settings				
	Application	Settings Lock Password		>	
$\bigcirc$	Application Application management			>	
Q	System	Startup & Shutdown			
	Date & Time, Language & Keyboard	PIR Settings		>	
0	About				
	Legal Information, Android Version	Pixel Shift	Interval 60 mins		
				,	
		Email			
Ø		DynaScrybe		>	
		Always hide native status bar			
				,	
		Storage		<u> </u>	
		System Update		>	
		Security		>	

Select "Download" or if there is no download option, select "Check Update".

3:32 💼 🥝 ඒ 🔹 🔸	ā		
ę	Wireless & Network		
۲ <u>۴</u>	Personal Wallpaper, Multi-Window Mode	Current Version 06 2084-01-72 32-6423	
₹	Input & Output     Sound, Input Settings	Needed for the upgrade	
G	Application Application management	2. The upgrade progress will remain provided  Check Update  Check Update	
C	System Date & Time, Language & Keyboard		
C	About Legal Information, Android Version		
_			
Ø			

3:32 💼 🥝 🌒 🔹 🔹				<b>S</b>
	ā			
	Wireless & Network	ζ System Update		
1	Personal Margages, Multi-Westere Mode	New Version 2004/04/91/2023.04/8	Download	
	Count and tentings	Update content		
	Application			
(	System Date & Time, Language & Keyboard			
	About     Legal Information, Androset Version			
		Schedule Update	>	
Ø		Current Version os 3554-67-79-35-629		
		Needed for the upgrade 1 208 of the disk spore or more. 2 The angradic progress will remain passend	Check Update	

# Using the Hotkey on your UX Pro Edge

In the settings app, go to "Personal" and select "Hotkey".

4:04 🌣 🔳 🕀 🜒	ā			<b>I</b>
1	Wireless & Network P Wi-Fi, Bluetooth, Ethernet	ersonal		
6	Personal Wallpaper, Multi-Window Mode	Wallpaper	>	
ŧ	Input & Output Sound, Input Settings	Hotkey Hotkey supports setting succe actions to the programmable button at the side of the display	None 💌	
G	Application Application management	Disable Hotkeys		
Ç.	Date & Time, Language & Keyboard	SystemDock Channel Settings Available in a	II channels 👻	
C	About Legal Information, Android Version	Gestures Enable gesture operations to reach frequently used apps or functions smoothly.	>	
		Multi-Window Mode Multi-Window Mode supports displaying more than one app at the same time, but may use more energy.		
		Account	>	
Ø		Multiple users	>	
		Default Whiteboard	LYNX Whiteboard 🛛 🗢	
		Default home app	Lux for Education	
		Block Saving		

From here, you can program the Hotkey to open a certain app or perform a certain function.


4:04 🌣 🔳 🕀 🛡	ā			
((:-	Wireless & Network W-Fi, Bluetooth, Ethernet	Personal		
	Personal Walipaper, Multi-Window Mode	Wallpaper		>
₹	Input & Output Sound, Input Settings	Hotkey Hotkey supports setting pack actions to the programmable button at the side of the display	None	•
$\odot$	Application Application management	Disable Hotkeys	None Volume	~
Ŗ	System Date & Time, Language & Keyboard	SystemDock Channel Settings Available in	External inputs	
0	About Legal Information, Android Version	Gestures Enable gestore operations to reach frequently-used apps or functions smoothly.	Annotate Screen freeze	
		Multi-Window Mode Multi-Window Mode supports displaying more than one app at the same time, but may use more energy.	0	-
		Account		>
Ø		Multiple users		>
		Default Whiteboard	LYNX Whiteboard	-
		Default home app	Lux for Education	-
		Block Saving	Q.	

You can also disable/enable the Hotkey by toggling the switch.


4:04 🌣 🔳 🖨 🖤	ā			<b>M</b>
(;·	Wireless & Network Pé	ersonal		
	Personal Walipaper, Multi-Window Mode	Wallpaper	>	
₹	Input & Output Sound, Input Settings	Hotkey Hotkey supports setting nuck actions to the programmable button at the side of the display	None	
$\odot$	Application Application management	Disable Hotkeys		
Ŗ	System Date & Time, Language & Keyboard	SystemDock Channel Settings Available in a	all channels 👻	
0	About Legal Information, Android Version	Gestures Enable gesture operations to reach frequently used apps or functions smoothy.	>	
		Multi-Window Mode Multi-Window Mode supports displaying more than one app at the same time, but may use more energy.		
		Account	>	
Ø		Multiple users	>	
		Default Whiteboard	LYNX Whiteboard 🛛 🗢	
		Default home app	Lux for Education	
		Block Saving	(D)	

# Using the Pressure Sensitivity

Open the whiteboard app.

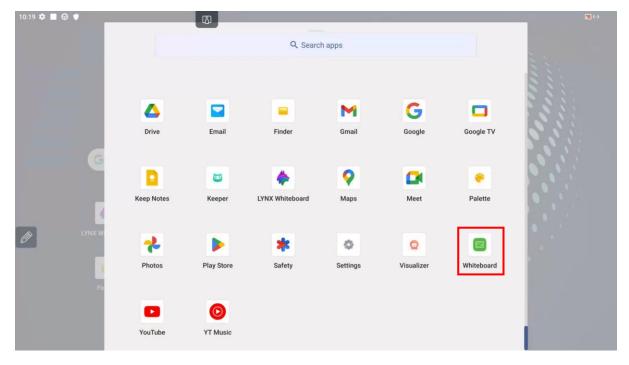

## Select the brush icon.

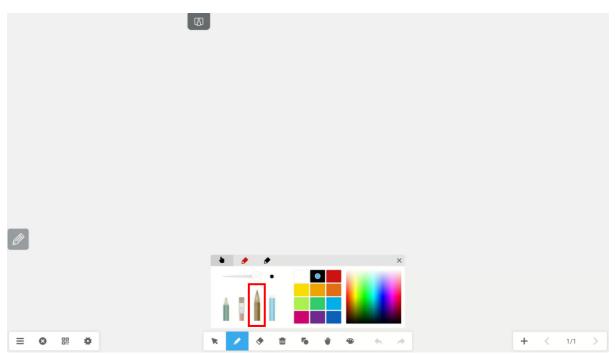

Pressure sensitivity will now be working.

