



CLEVERTOUCH[®]

?

TECHNOLOGIES

by Boxlight®

Pico XI Setup

How to guide

Contents Page

Connecting the Player 03-10 Configuring the Pico XI 04-12



Connecting the Player

1. Connect one end of a HDMI cable to the HDMI port on the Pico unit and the other end to your screen.

					0	V
1	DC IN	LAN	HDMI	TYPE-C	AUDIO	J

1. Press the power button to start the Pico player.



Configuring the Pico XI



1. Select **Allow** when the pop-up message appears.

Allow CleverLive to access photos, media, and files on your device?	
ALLOW	
DENY	

1. Select **OK** when permissions window appears.



3. Select **Allow from this source.**

÷	Install unknown apps	5	à
	CleverLive 3.8.5		
	Allow from this source	0	
	Your tablet and personal data are more vulnerable to attack by unknown apps. By installing apps from this source, you agree that you are responsible for any damage to your tablet or loss of data that may result from their use.		

3. Select the **Cog icon** from the main Cleverlive screen.

C	LE	ER	v:ss	LIVE
	ø			0

5. Switch on **Wi-Fi**

÷	Network & internet	lā 🖉	50,5 4
((:	Wi-Fi Off		
*	Airplane mode		(D)
<···>	Ethernet		
0	Hotspot & tethering Off		
0	Data Saver Off		
~	Advanced VPN, Private DNS		

5. Select **Network and Internet** from the menu

P: 0	0/1 Q	dX: 0.0	dY: 0.0	Xv: 0.0	Yv: 0.0	Prs: 0.50	Size: 0.0	
ų	~	ocaron actings						
	Ŷ	Network & internet WFFi, data usage, and hotspot						
	60	Connected devices Bluetooth						
		Apps & notifications Recent apps, default apps						
	٥	Display Wallpaper, sleep, font size						
	4)	Sound Volume, vibration, Do Not Disturb						
		Storage 19% used - 25.95 GB free						
	(Privacy Permissions, account activity, personal data						
	0	Location On - 1 app has access to location						
	渝	Security						



- 7. Select the **Router**,
- 8. Enter the password details to join the network.

	Use Wi-Fi
•	LUXSPOT
•	SKYFR9Q
-	BT-RSCWSW
1	BTWi-fi
$\widehat{\mathbf{A}}$	NOWTV505E9-EXT
$\widehat{\mathbf{v}}$	SKYC97C2
$\widehat{\mathbf{v}}$	SKYK1BRB
\bigtriangledown	BT-JWA897
\bigtriangledown	BTWifi-X
\bigtriangledown	NOWTV505E9
	SKYW6EYH
4	Add network
	Wi-Fi preferences Wi-Fi doesn't turn back on automat
	Wi-Fi data usage

9. Select **Apps and Notifications**

P·0/1	0.0 ·Xb	dV: 0.0	Xv: 0.0	Vv: 0.0	Pret 0.50	Size: 0.0
٩	Search settings	ā 🖉	AT. 0.0	11.0.0	10.000	0.22. 0.0
হ	Network & internet Wr-Fi, data usage, and hotspot					
៲៰៰	Connected devices Bluetooth					
	Apps & notifications Recent apps, default apps					
٥	Display Wallpaper, sleep, font size					
4)	Sound Volume, vibration, Do Not Disturb					
	Storage 19% used - 25.95 GB free					
(Privacy Permissions, account activity, personal data					
0	Location On - 1 app has access to location					
Ì	Security Screen lock					
2	Accounts No accounts added					
Ť	Accessibility Screen readers, display, interaction controls					
()	MCU setting MCU SETTINGS					
	Screenshot Screenshot					
		u()	4 0 1	•••		

Note: Android commands now included above, to include from left to right,

Sound, Back, Select, Screenshot and Restart.

10. Launch **CleverLive**

4	App info		🖉 ا لقا				Q
				CleverLive			
		D OPEN		O ISABLE		A FORCE STOP	
	Notifications ~0 notifications per w	eek					
	Permissions Files and media						
	Storage & cache 28.67 kB used in intern	nal storage					
	Mobile data & Wi-Fi No data used	i					
~	Advanced Battery, Open by defa	ult, Advanced					
	1						
Ø							
					<u>ل</u>		

11. Select **Allow from this source.**

7

		$\zeta \bigcirc \zeta$	>
÷	Install unknown apps		C
	5		
	CleverLive		
	Allow from this source	Г	
	Your tablet and personal data are more vulnerable to attack by unknown apps. By installing apps from this source, you agree that you are responsible for any damage to your tablet or loss of data that may result from their use.	L	
Ì			
	 ◄ ● ■ ◄ ♦ 		

12. Launch Clevelive, select the **Click here to connect** button.



13. Make a note of the Pin Code

CLEVER LIVE

Here is your CleverLive pin code. Use this code to connect your player to your CleverLive account.

Important:

Please do not close this screen until you have connected to your account. Once this screen is closed, the pin code is no longer valid.

ω

Ø

If you need to configure your network firewall to allow connection, please visit this page for more information www.cleverlive.com/firewall

Pin code:

c79fc079

If you need to quickly connect multiple screens, login to CleverLive, using your mobile phone, then scan these QR codes on each of your screens



14. Log into Cleverlive, add the screen to the account.