

CLEVERTOUCH

Notification of changes in upcoming Android 15 IMPACT Lux OTA Firmware.

 
We are pleased to announce the release of IMPACT Lux Android 15 firmware. This release brings the following features, functionality, improvements and changes:

- 1. Android has been updated to Android 15**
 - Improved Security
 - Improved Performance
 - Increased length of Security Updates support
- 2. Settings Overhaul**
 - The two settings app have now been merged into one.
 - See Separate PDF – Android 15 Settings.
- 3. Added QR Code Login**
 - See FAQ “How do I setup QR Code Login?”
- 4. Added Camera selection**
- 5. Resolved an issue with speakers settings reset after a reboot**
- 6. Updated Photo app colour scheme**
- 7. Updated Hotspot name to a unique identifier**
- 8. Optimised Hotspot**
- 9. Optimised CleverCam compatible with Microsoft Teams**
- 10. Addressed an issue with Google Lens distortion**
- 11. Addressed an issue with static noise from speakers when muted**
- 12. Clevertouch MDM has been updated**
- 13. ClevertouchLive has been updated**
- 14. LYNX Whiteboard has been updated**


Frequently Asked Questions

How do I setup QR Code Login?


For QR code login, you will need to have either a PIN or a password set. In the settings app, select “Security & privacy” then “Device unlock”.

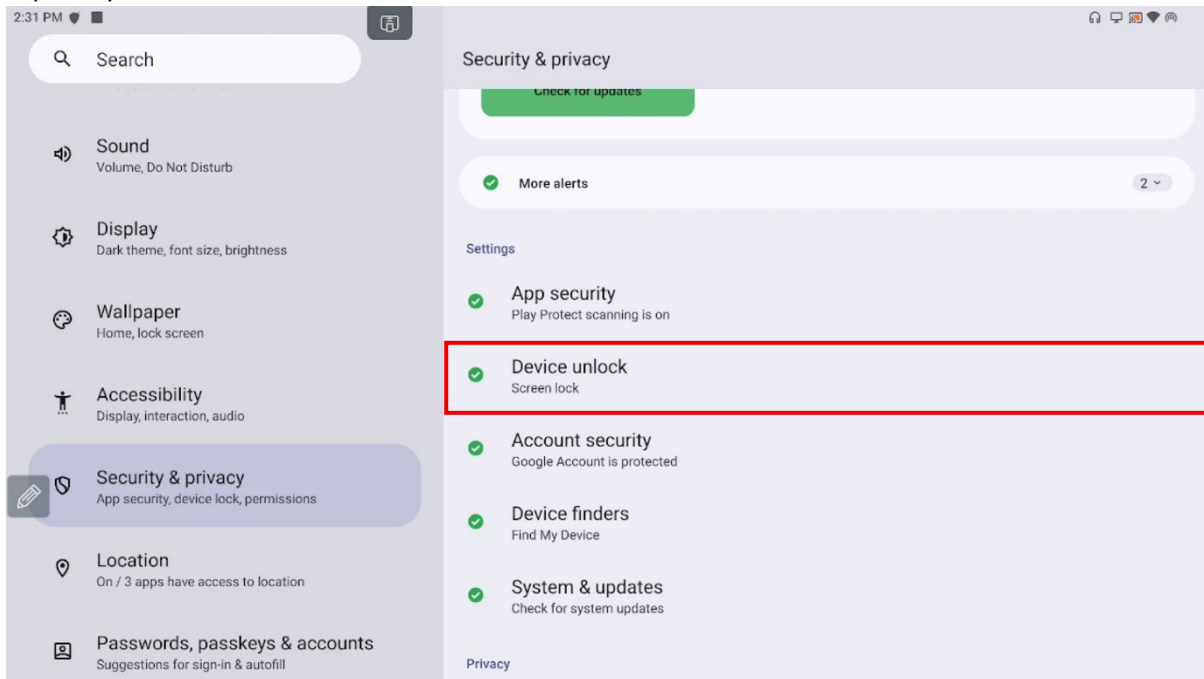


Select “Screen lock”.

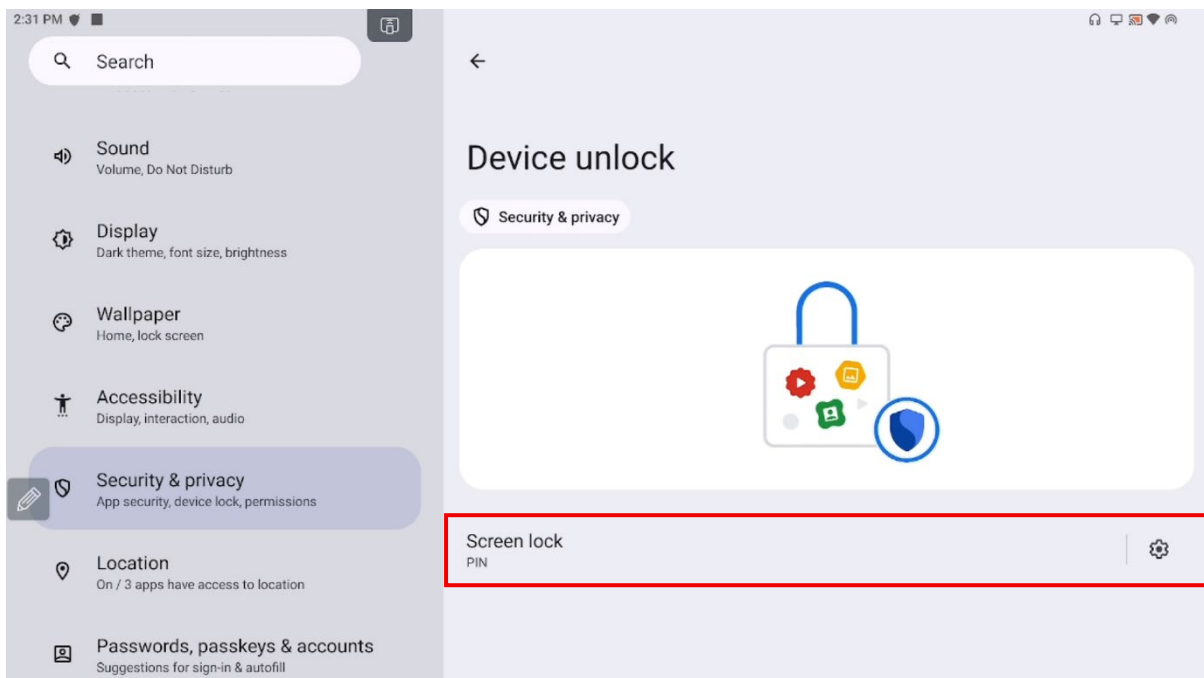 


Select either “PIN” or “Password”. (QR code login is only available on these 2 options)

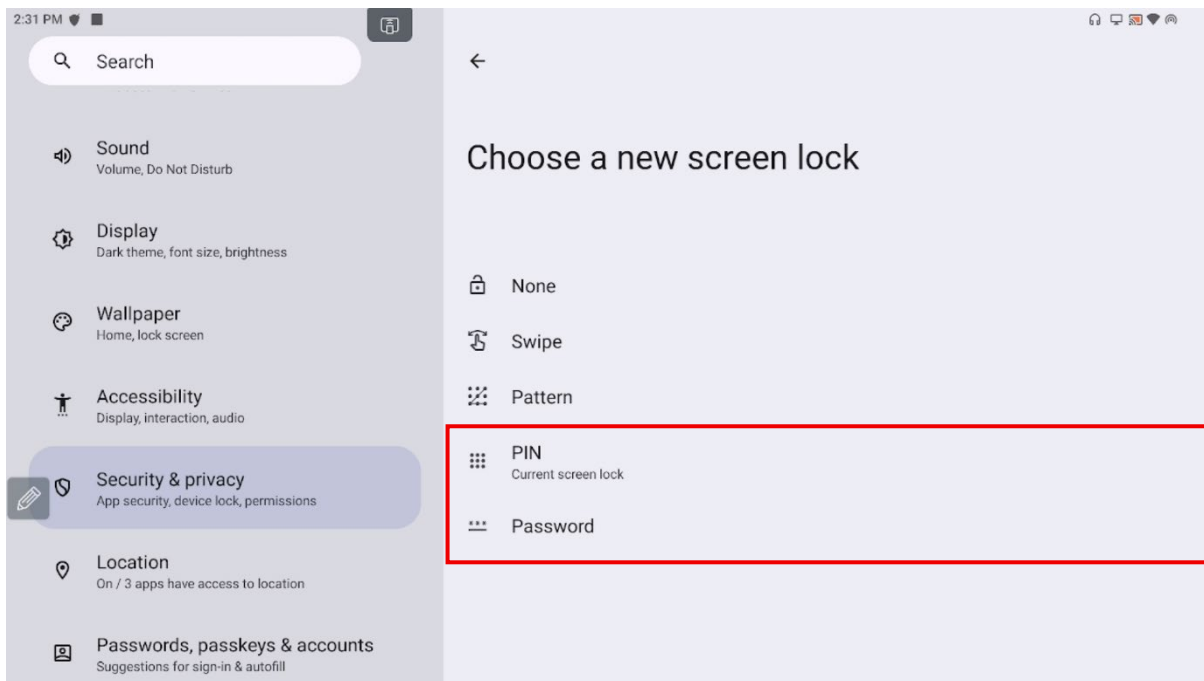

Once your device is locked, scan the QR code with a mobile device.

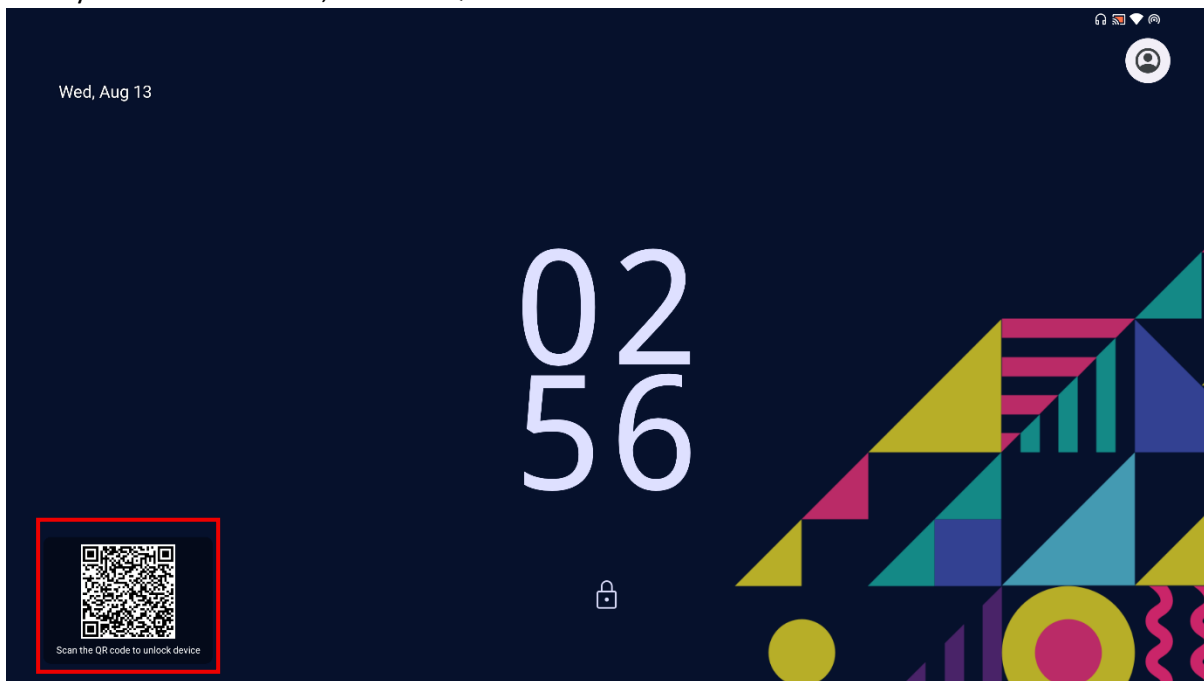

Input your PIN or password and select “Submit”. You will then be logged into your account.

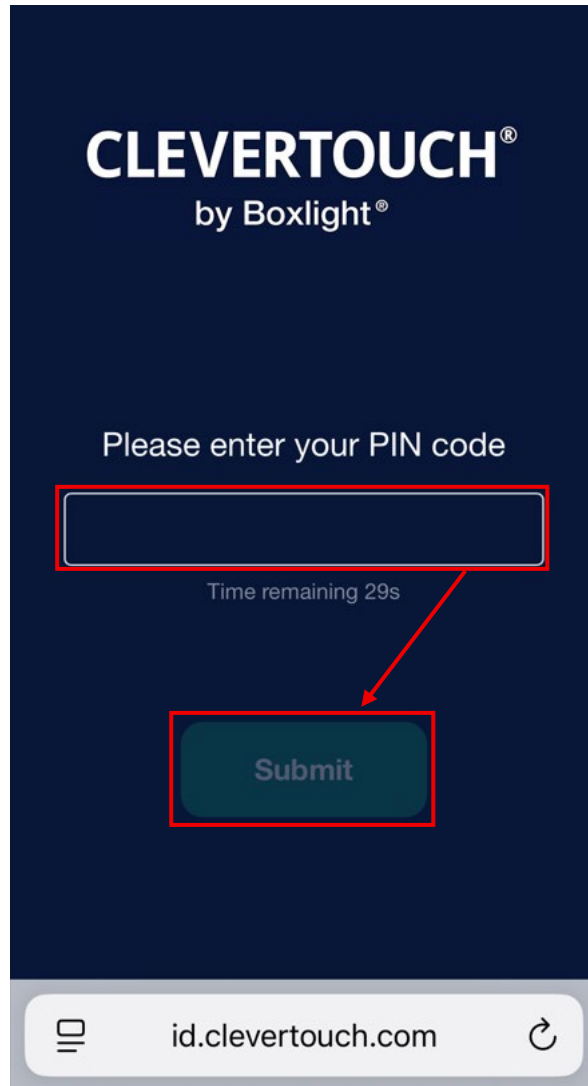The image shows a mobile application interface for Clevertouch. At the top, the logo "CLEVERTOUCH® by Boxlight®" is displayed in white on a dark blue background. Below the logo, the text "Please enter your PIN code" is centered. Underneath this text is a white rectangular input field with a thin red border. Below the input field, the text "Time remaining 29s" is displayed. Further down is a dark teal rectangular button with the word "Submit" in white, also outlined with a red border. A red arrow points from the input field to the "Submit" button. At the bottom of the screen is a white mobile browser address bar containing a hamburger menu icon on the left, the URL "id.clevertouch.com" in the center, and a refresh icon on the right.